


HOW TO MEASURE IT?


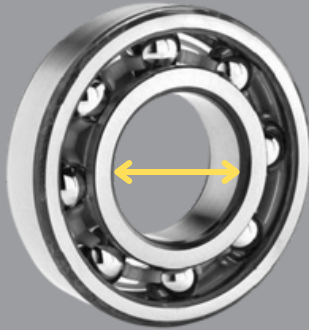


STEP ONE

Measure the internal diameter.

STEP TWO

Measure the external diameter.

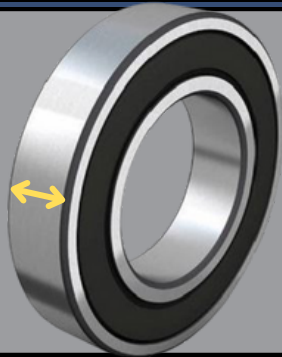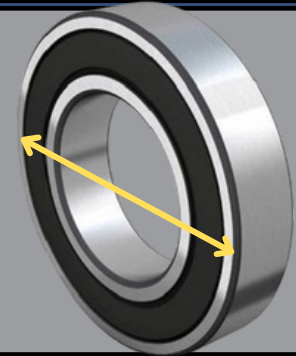

STEP THREE

Measure the width.

STEP FOUR

Cross reference your measurements using our simple to follow table.



IDENTIFYING THE SEALS

