
IDENTIFY YOUR BEARING TYPE



HOW TO MEASURE IT?

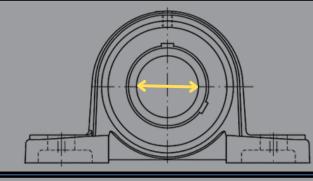



STEP ONE

Measure the internal diameter.

<u>STEP TWO</u>

Measure from the center of one bolt hole to another.

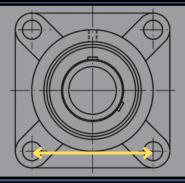

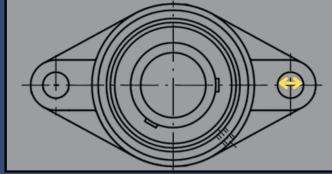

<u>STEP THREE</u>

Measure the diameter of the bolt hole.

STEP FOUR

Cross reference your measurements using our simple to follow table.

